


## 8" SOFT-CLOSE PULLOUT WITH BLUM TANDEM SLIDES WITH BLUMOTION

### TOOLS REQUIRED:

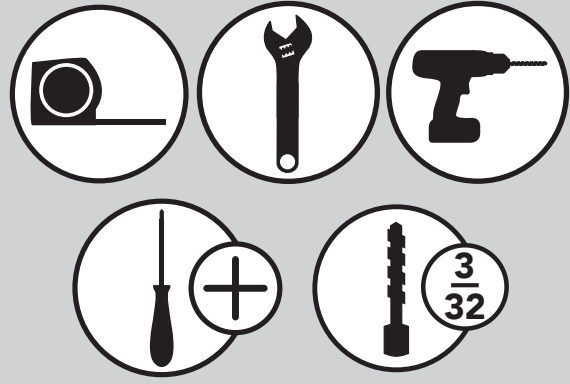

### ESTIMATED ASSEMBLY TIME:


**30 MIN**

### CARE AND MAINTENANCE:

Clean with a damp cloth and wipe parts dry.

### PARTS LIST

- Frame/Slide assembly
- (4) #6 x 1/2" flat head screw
- (4) #8 x 3/4" deep thread pan head screw
- Template
- Rub Bushing Kit

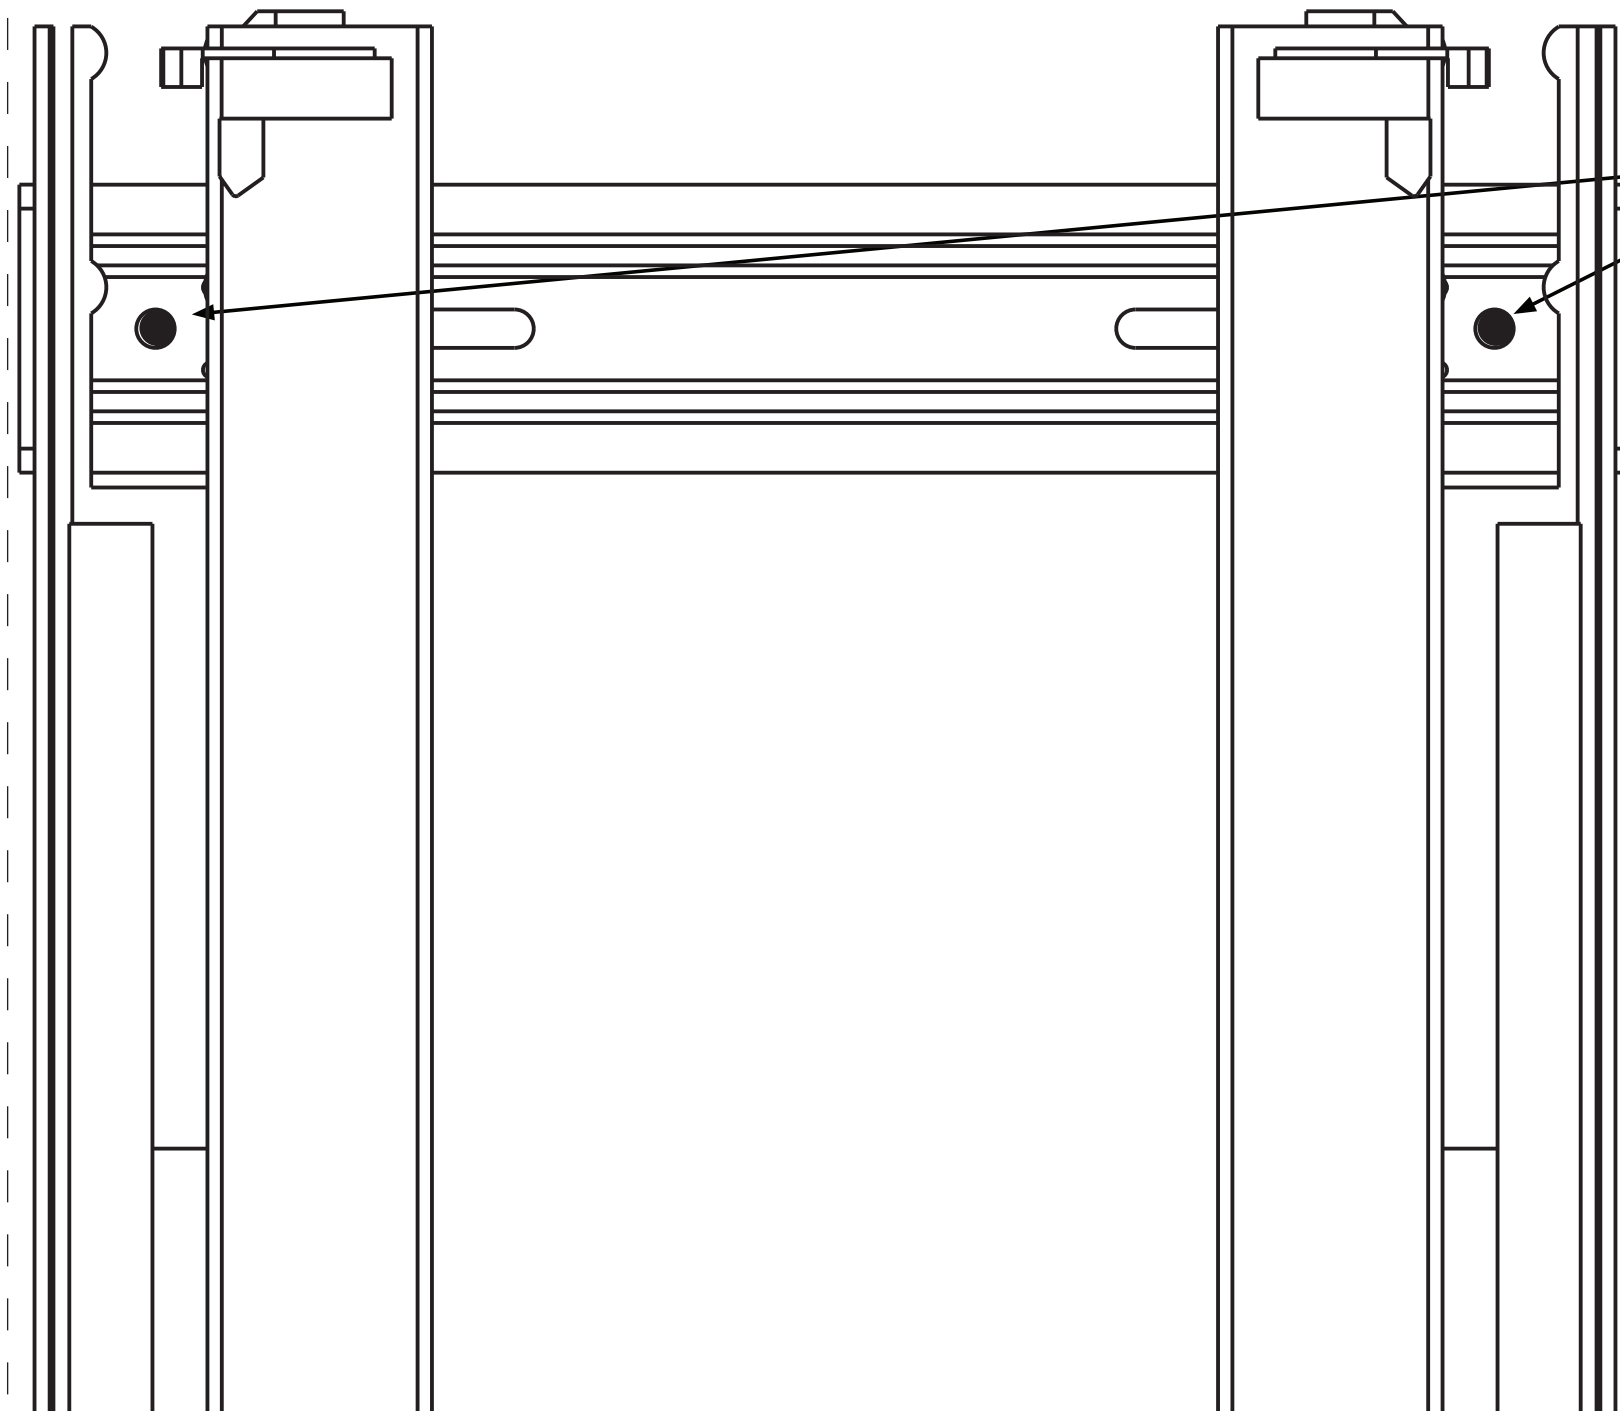

Screw and Pilot Hole Location (4) Places

#### Attaching slide to cabinet

- 1) Using the mounting template locations, pre drill 4 holes using a 3/32" drill bit.
- 2) Remove template and attach the slide assembly to the floor of the cabinet using (4) #8 x 3/4" deep thread screws provided.
- 3) With the slides in the fully closed position, place the frame on the slides and push back until you feel the slides engage the locking devices (you will hear a click sound). Fully cycle the frame a few times.

#### Attaching the cabinet door

- 1) Loosen the (4) lock nuts (3/8" wrench) inside the front wall of the unit. (See Fig 1)
- 2) Pull the Adjustable Door Mounting Brackets to ensure that you are mounting to the "thick" portion of the cabinet door. (Front of pull out should line up with front of face frame).
- 3) Use the (4) #6 x 1/2" flat head screws provided to attach the door to the pullout unit.
- 4) If the door needs to be tilted to lay flush against the face frame, loosen the 8mm nuts and turn the "T-Nut" screws so that it pushes against the metal bracket. Each corner can be adjusted independently. (Note: It is recommended that door bumpers be used on each corner to ensure quiet operation)

Install rub bushings using enclosed kit and instructions (Note: Chassis may need to be removed for proper installation)


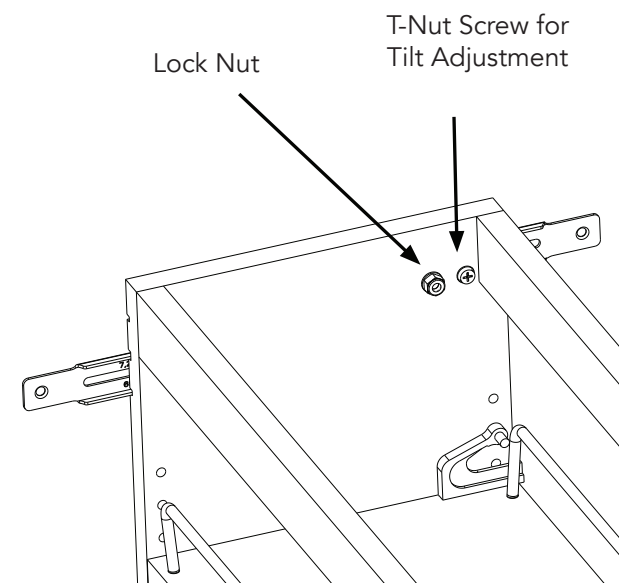



Fig 1

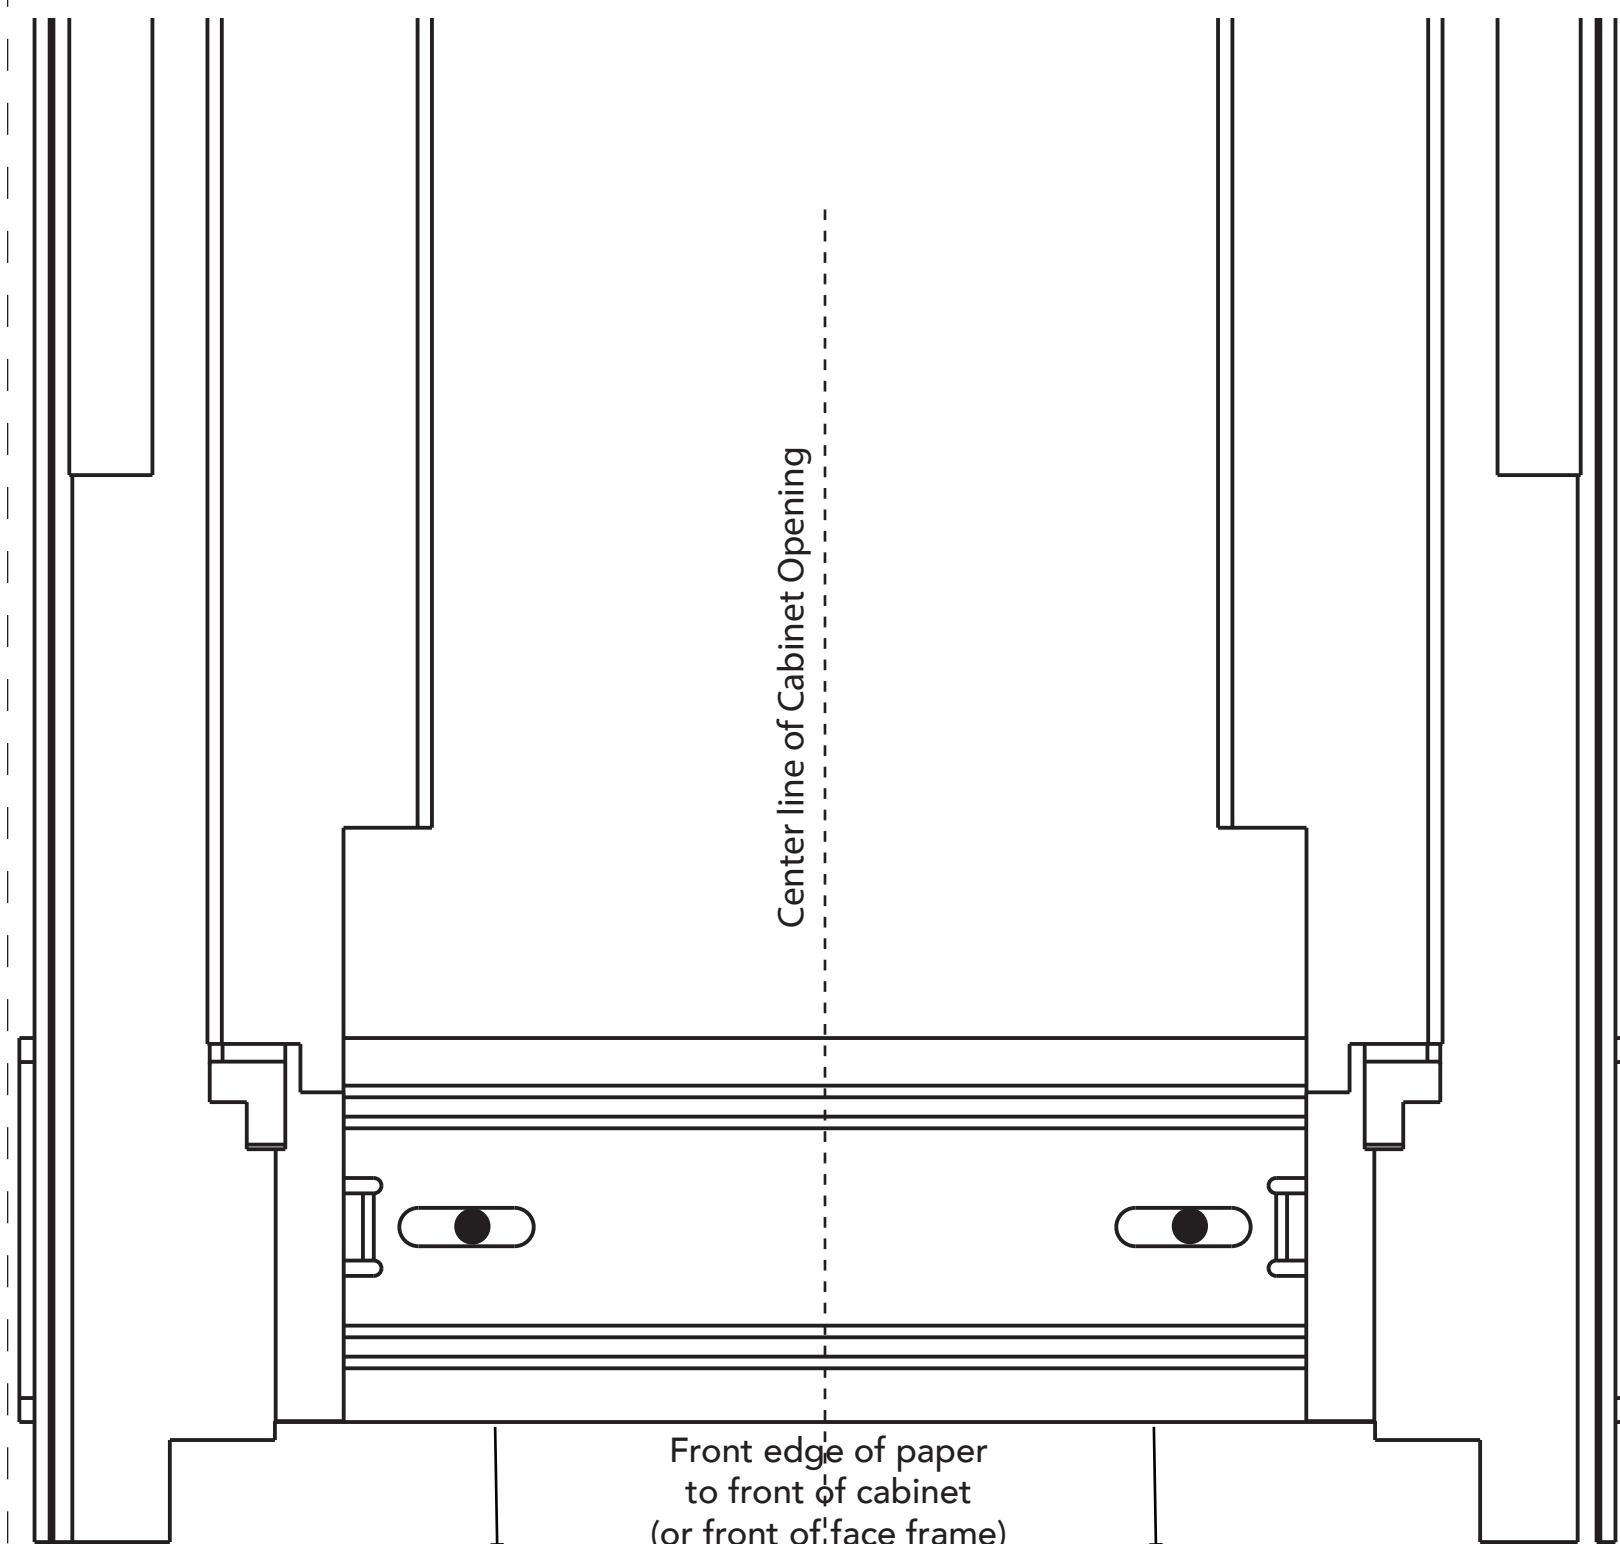

Fold Template along this edge to fit cabinet opening.

# 5" SOFT-CLOSE PULLOUT WITH BLUM TANDEM SLIDES WITH BLUMOTION

### TOOLS REQUIRED:

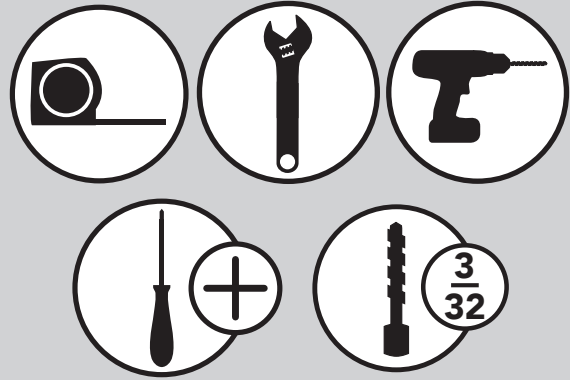

### ESTIMATED ASSEMBLY TIME:


**30 MIN**

### CARE AND MAINTENANCE:

Clean with a damp cloth and wipe parts dry.

### PARTS LIST

- Frame/Slide assembly
- (4) #6 x 1/2" flat head screw
- (4) #8 x 3/4" deep thread pan head screw
- Template
- Rub Bushing Kit

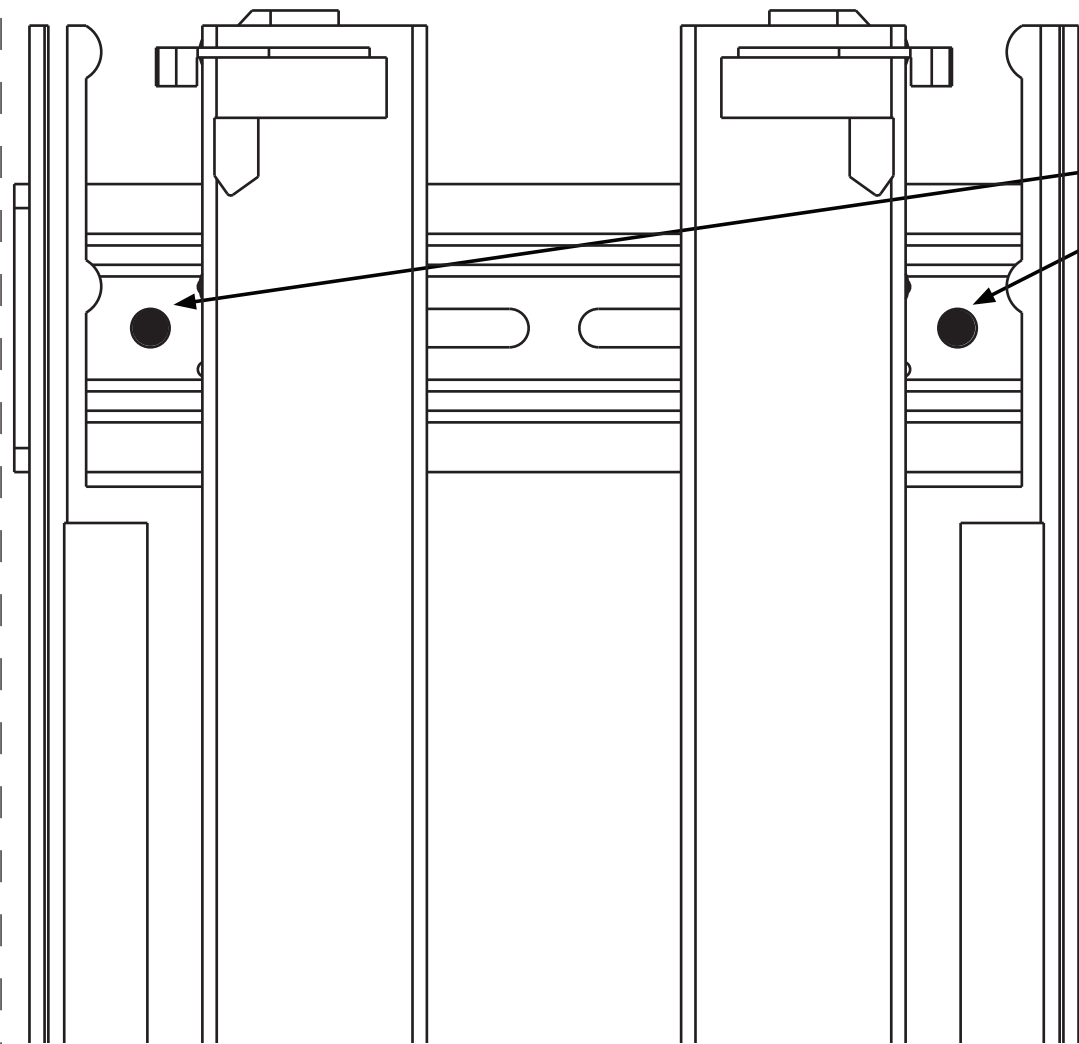

Screw and Pilot Hole  
Location (4) Places

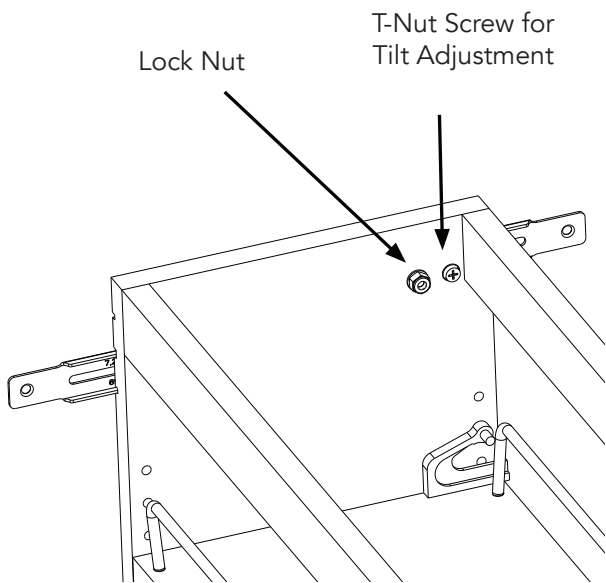


Fig 1


#### Attaching slide to cabinet

- 1) Using the mounting template locations, pre drill 4 holes using a 3/32" drill bit.
- 2) Remove template and attach the slide assembly to the floor of the cabinet using (4) #8 x 3/4" deep thread screws provided.
- 3) With the slides in the fully closed position, place the frame on the slides and push back until you feel the slides engage the locking devices (you will hear a click sound). Fully cycle the frame a few times.

#### Attaching the cabinet door

- 1) Loosen the (4) lock nuts (3/8" wrench) inside the front wall of the unit. (See Fig 1)
- 2) Pull the Adjustable Door Mounting Brackets to ensure that you are mounting to the "thick" portion of the cabinet door. (Front of pull out should line up with front of face frame).
- 3) Use the (4) #6 x 1/2" flat head screws provided to attach the door to the pullout unit.
- 4) If the door needs to be tilted to lay flush against the face frame, loosen the 8mm nuts and turn the "T-Nut" screws so that it pushes against the metal bracket. Each corner can be adjusted independently. (Note: It is recommended that door bumpers be used on each corner to ensure quiet operation)

Install rub bushings using enclosed kit and instructions (Note: Chassis may need to be removed for proper installation)

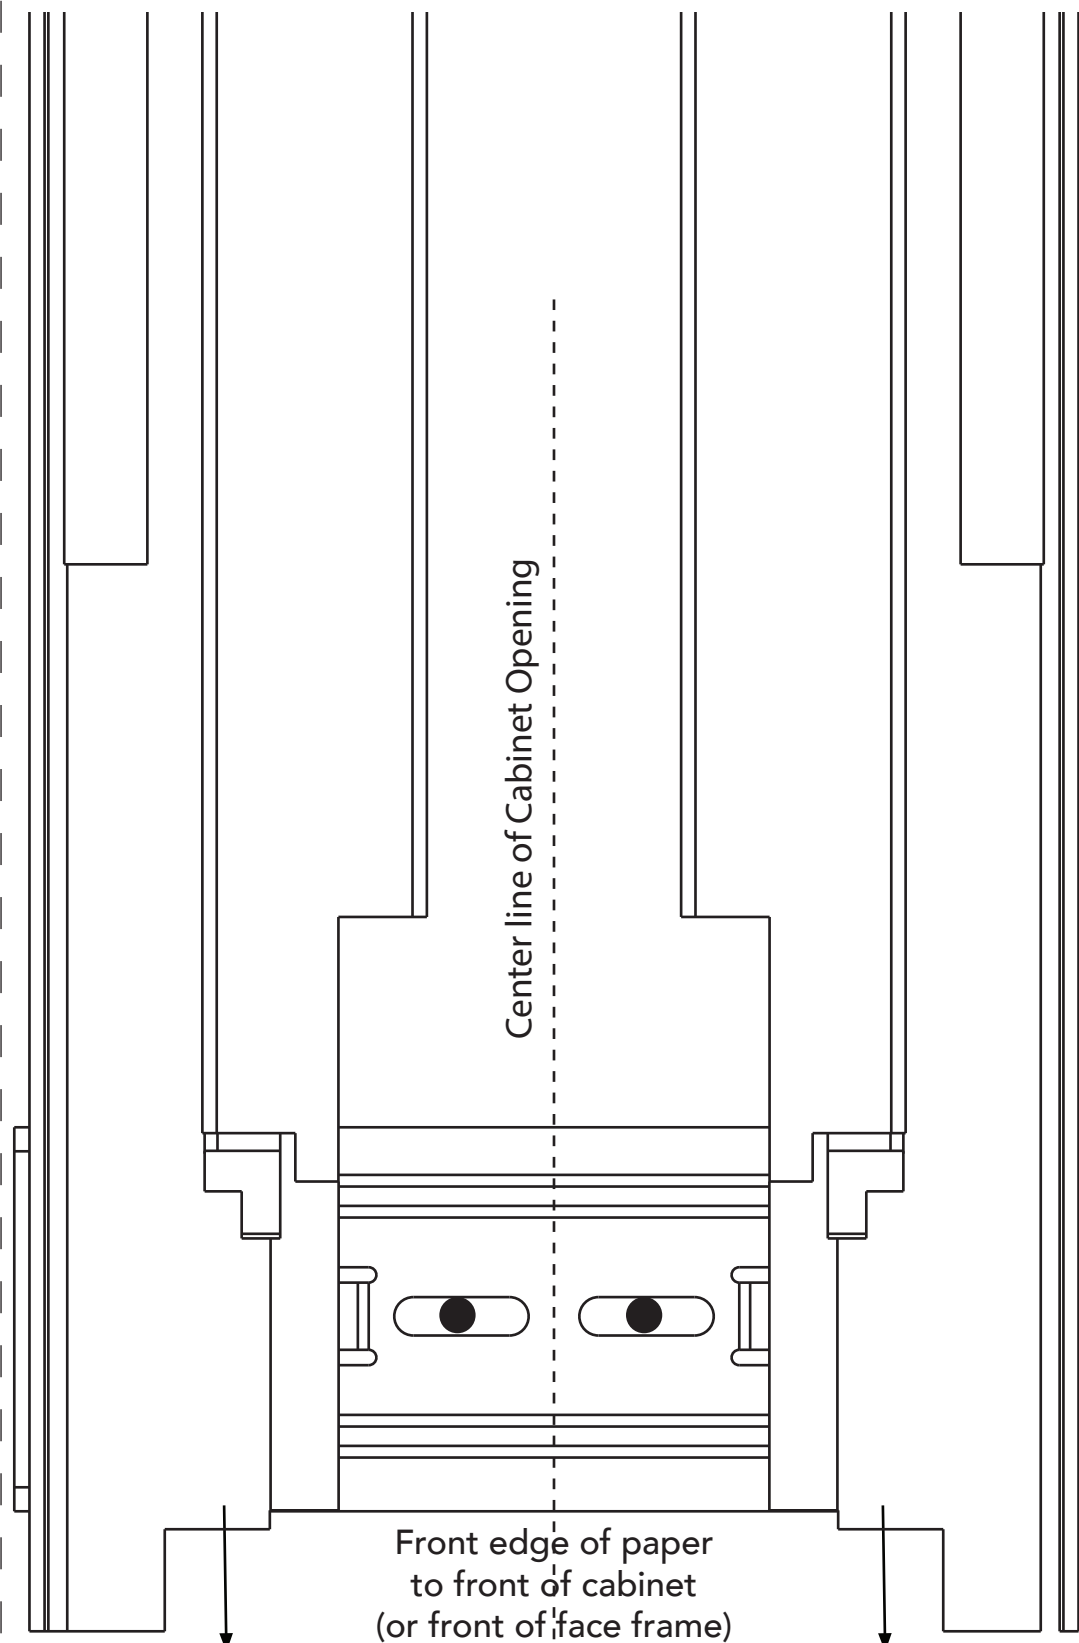

Fold Template along this edge to fit  
cabinet opening.



12400 Earl Jones Way  
Louisville, KY 40299  
rev-a-shelf.com  
Customer Service: 800-626-1126



## INSTALLATION INSTRUCTIONS

### LOCKING DEVICES

#### TOOLS REQUIRED:



#### ESTIMATED ASSEMBLY TIME:

**1 MIN**


#### INSTRUCTIONS

If applicable, install locking devices. (See Fig A).


Locking devices will look different based on unit purchased.

Turn unit upside down and attach triggers to front bottom of frame.

Narrow

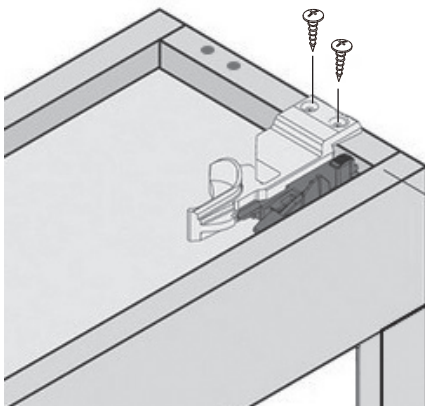

Wide

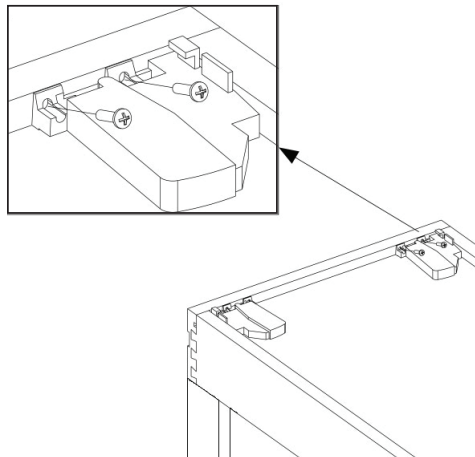

I-BLD-1122



12400 Earl Jones Way  
Louisville, KY 40299  
rev-a-shelf.com  
800-626-1126



## INSTRUCCIONES DE INSTALACIÓN / INSTRUCTIONS D'INSTALLATION

### DISPOSITIVOS DE CIERRE / DISPOSITIFS DE VERROUILLAGE

Herramientas requeridas:  
Outils Requis:



Tiempo estimado de ensamblado:  
Durée de l'installation:

**1 MIN**

Instrucciones de Instalación  
Instructions d'installation


Si corresponde, instale dispositivos de cierre (Fig. A).

Le cas échéant, installez les dispositifs de verrouillage (Fig. A).


Los dispositivos de cierre tendrán un aspecto diferente según la unidad adquirida.  
*Les dispositifs de verrouillage seront différents selon l'unité achetée.*

Gire la unidad boca abajo y coloque los disparadores en la parte inferior delantera del marco.  
*Retournez l'unité et fixez les déclencheurs à la partie inférieure avant du cadre.*

Estrecho / Étroit

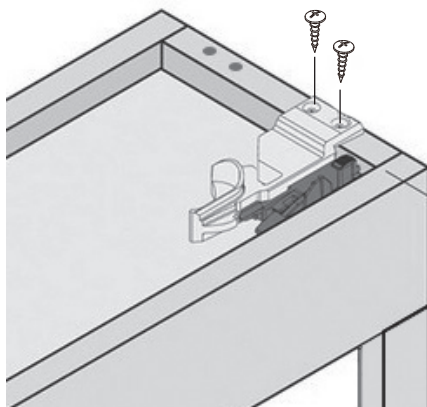

Amplio / Large

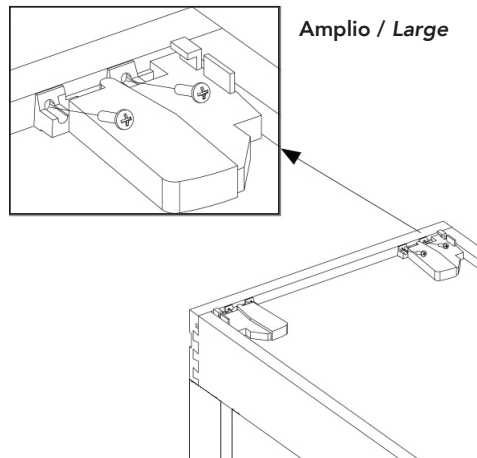

I-BLD-1122