

## **MINIMUM CABINET OPENING (MCO)**

**FRAMED VS. FRAMELESS** 

COMMON **FACE FRAME WIDTHS:** 



W WIDTH


D DEPTH


(I) HEIGHT

1-1/2" 1-5/8"

**PLEASE NOTE!** When measuring, check for obstructions such as door hinges or plumbing

1-3/4"

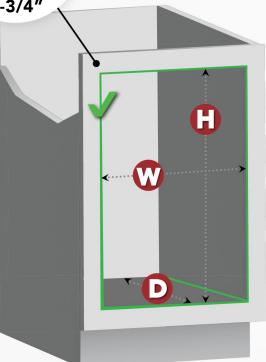

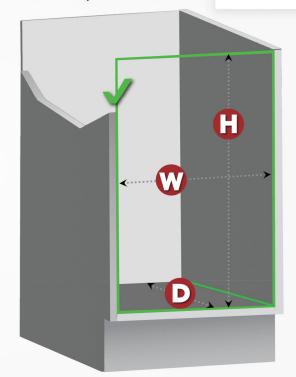

## **FRAMED**

Traditional style common in the USA



**FRAMELESS** 

(Full-Access) European inspired design

HOW TO MEASURE