

## **MINIMUM CABINET OPENING (MCO)**




**PLEASE NOTE!** When measuring, check for obstructions such as door hinges or plumbing

**W** WIDTH

D DEPTH


(I) HEIGHT

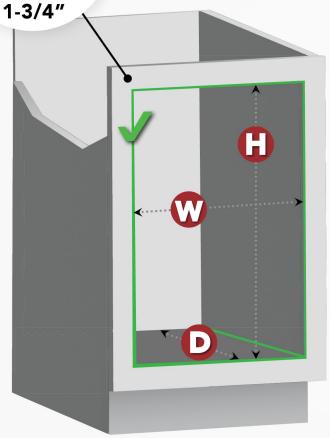

**WIDTHS:** 

1-1/2"

1-5/8"

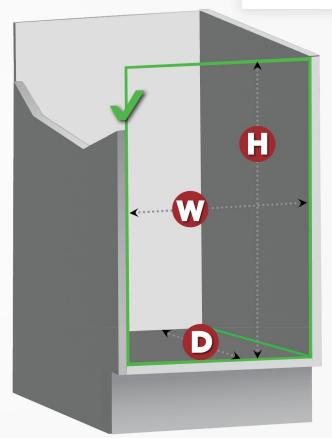

## **FRAMED**

Traditional style common in the USA



HOW TO MEASURE