

MINIMUM CABINET OPENING (MCO)

FRAMED VS. FRAMELESS






W WIDTH


D DEPTH

HEIGHT

1-1/2*"* 1-5/8*"*

PLEASE NOTE! When measuring, check for obstructions such as door hinges or plumbing

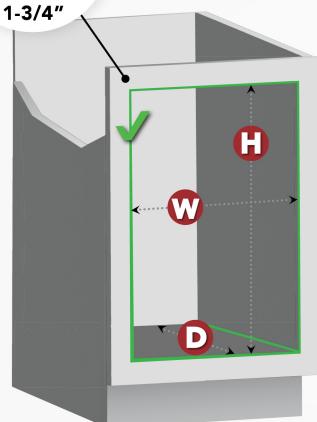

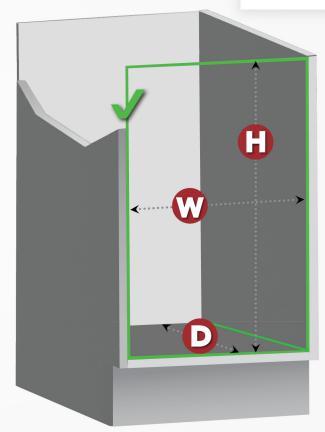

FRAMED

Traditional style common in the USA



FRAMELESS

(Full-Access)
European inspired design

HOW TO MEASURE